


## INSTALLATION INSTRUCTIONS - FOR SLIPPER BATH WITH BALL AND CLAW FEET

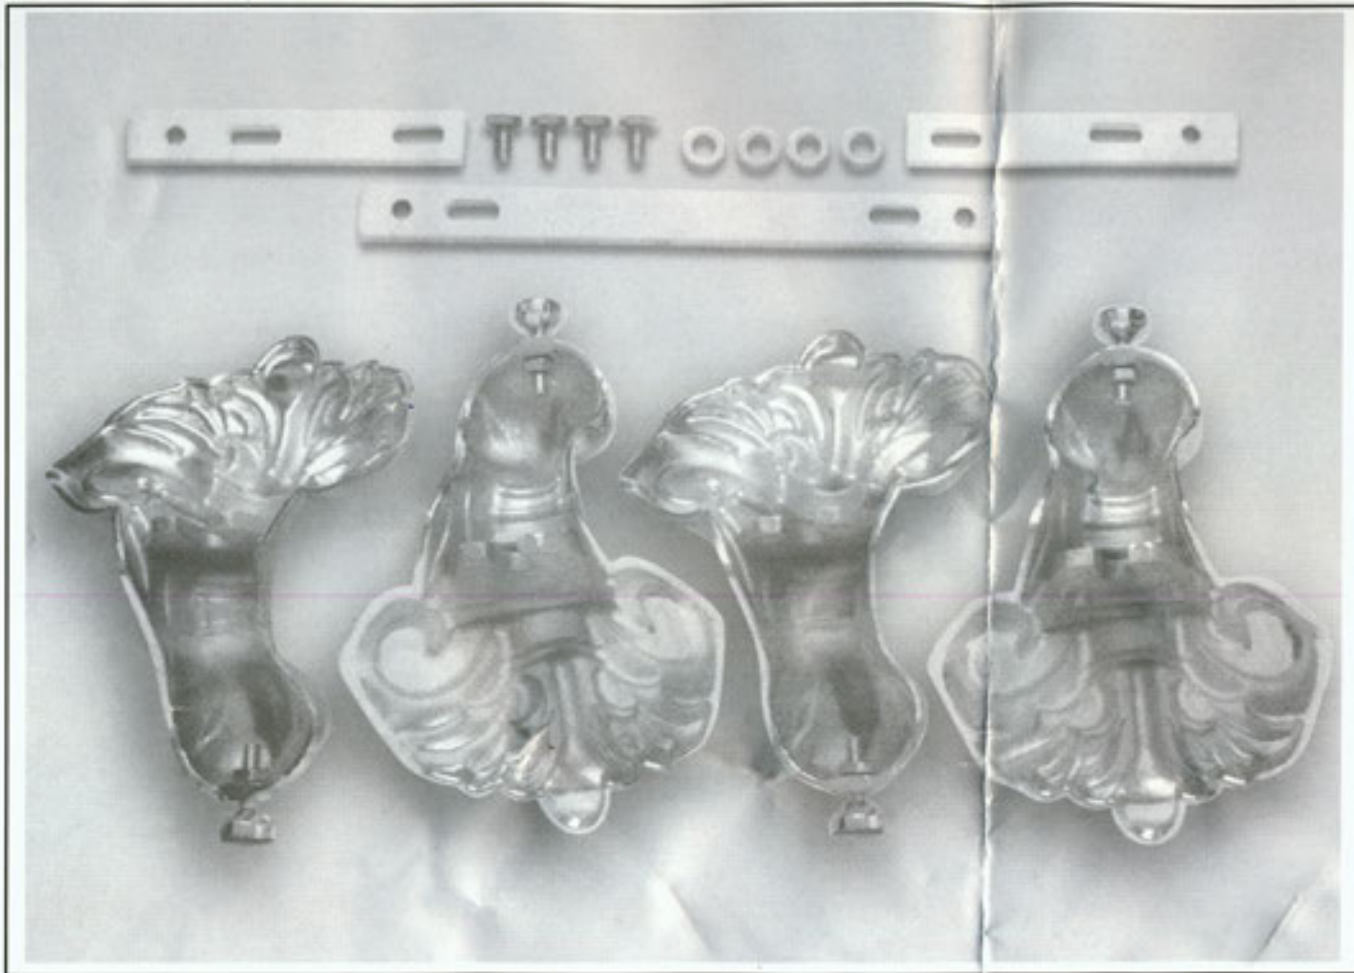

### CONTENTS CHECKLIST:

ITEM 1 - 3 number Fixing Brackets

ITEM 2 - 4 number Ball and Claw  
Chrome Plated Feet

ITEM 3 - 4 number Bolts

ITEM 4 - 4 number Washers

**TOOLS REQUIRED**  
Adjustable Spanner

### INSTALLATION:

1. Attach the brackets, Item 1, to the base of the bath and secure with nuts and washers supplied with bath.
2. Align the feet, Item 2, with the location holes in the fixing brackets and secure with the bolts and washers, Items 3 and 4.
3. If applicable, Modern or Dragon Foot Design, screw Adjustable Feet - Item 5, into the bracket.
4. Adjust the Feet on all designs to align the bath and secure in position by tightening the locknut.



